



AYANEO


AM02

RETRO MINI PC

User Manual

深圳市攻壳科技有限公司
深圳市南山区桃源街道平山社区
留仙大道 4109 号创客小镇 22 栋 215
AYANEO.COM.CN
service@ayaneo.com

Shenzhen Konk Technology Co., Ltd
Room 215, Building 22, Maker Town, No.4109, Liuxian Avenue,
Pingshan Community, Taoyuan Street, Nanshan District, Shenzhen, China
AYANEO.COM
service@ayaneo.com

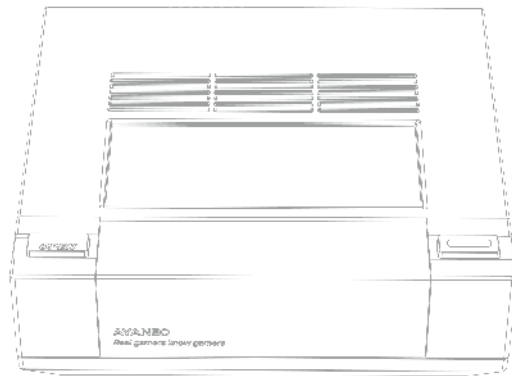

目录

1	您的 AYANEO Retro Mini PC AM02 包装内应包含以下物品
2	前视图
3	后视图
4	顶视图
5	底视图
6	使用您的AYANEO Retro Mini PC AM02
6	电源供电
6	连接屏幕
7	通过 HDMI 接口连接屏幕
7	通过 DisplayPort 接口连接屏幕
8	通过 USB-C 接口连接屏幕
8	通过 USB 连接键盘与鼠标
9	启动您的 AYANEO Retro Mini PC AM02
9	升级您的 AYANEO Retro Mini PC AM02
10	拆卸底部盖板
11	装回底部盖板
12	取出 AYANEO Retro Mini PC AM02 主板
13	装回 AYANEO Retro Mini PC AM02 主板
14	升级或安装 M.2 SSD固态硬盘
15	取出 M.2 SSD
15	升级或安装内存
16	取出内存
16	升级或安装无线网卡
17	取出网卡
18	开启/关闭
18	睡眠/唤醒
18	进入 BIOS 设置
19	注意事项
19	电源供电
19	医疗设备干扰
20	支持

Content


Your AYANEO Retro Mini PC AM02 package should include the following items
Front View
Rear View
Top View
Bottom View
Use Your AYANEO Retro Mini PC AM02
Power Supply
Connecting the Screen
Connecting the Screen via the HDMI Interface
Connecting the Screen via the DisplayPort
Connecting the Screen via USB-C Interface
Connecting Keyboard and Mouse via USB
Start your AYANEO Retro Mini PC AM02
Update Your AYANEO Retro Mini PC AM02
Disassembling the Bottom Cover
Reassembling the Bottom Cover
Removing the AYANEO Retro Mini PC AM02 Motherboard
Reinstalling the AYANEO Retro Mini PC AM02 Motherboard
Upgrading or Installing M.2 SSD
Removing the M.2 SSD
Upgrading or Installing Memory
Removing Memory
Upgrading or Installing Wireless Network Card
Removing the Network Card
Power On/Off
Sleep/Wake
Accessing BIOS Settings
Notes
Power Supply
Medical Device Interference
Support

您的 AYANEO Retro Mini PC AM02 包装内应包含以下物品：
说明：以下图示仅供参考，部分配件会根据购买型号配置与国家或地区而有所差异。

- 1. AYANEO Retro Mini PC AM02 主机
- 2. GaN 100W PD 电源适配器
- 3. USB-C 电源线
- 4. HDMI 高清连接线
- 5. 使用说明书
- 6. 螺丝起子 (升级拆机用) 2 个
- 7. SSD和网卡固定螺丝, M2*3 规格螺丝 5 颗
- 8. AC 电源转换器 (根据购买型号配置与国家或者地区而有所差异)

Your AYANEO Retro Mini PC AM02 package should include the following items:
Note: The illustrations below are for reference only, and some accessories may vary depending on the purchased model configuration and the country or region.

- 1. AYANEO Retro Mini PC AM02 device
- 2. GaN 100W PD power adapter
- 3. USB-C power cable
- 4. HDMI high-definition connection cable
- 5. User manual
- 6. Screwdriver (for upgrade and disassembly) x 2
- 7. SSD and network card fixing screws, M2*3 specification screws x 5
- 8. AC power converter (may vary depending on the purchased model configuration and country or region)

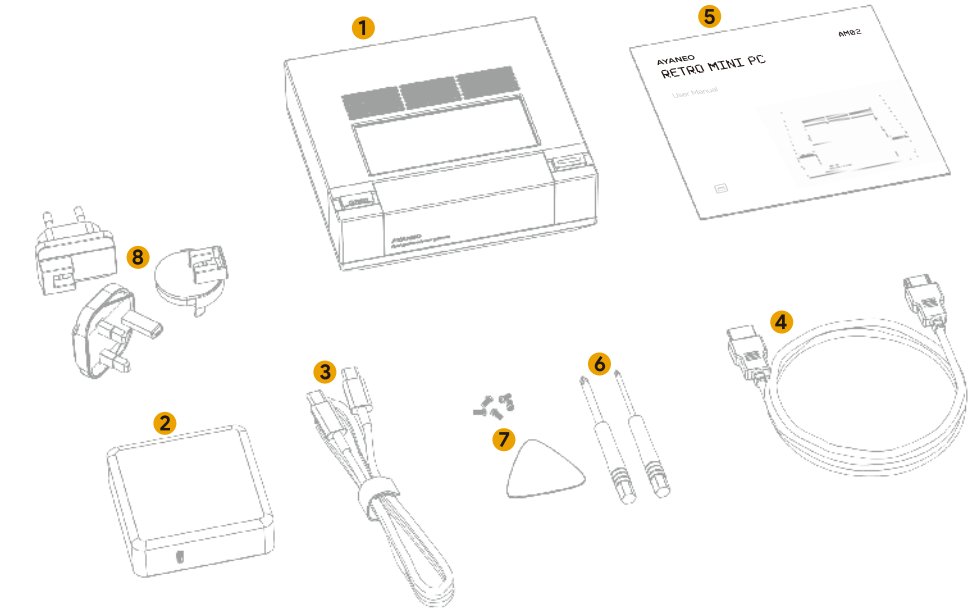

前视图

*挡板开启状态

1 全功能 USB4 Type-C 接口


该接口为全功能接口, 提供高达 40Gbps 传输速率, 可以满足大带宽需求的设备, 您可以连接 U 盘移动存储设备或者其它配备 USB-C 接口的设备。支持视频投屏, 投屏需要显示设备支持 USB-C 视频源输入和专用全功能 USB-C 连接线。支持 4K (3840x2160@144Hz)。

2 USB 3.2 Gen 2 接口

2 * USB 3.2 Gen 2 Type-A 接口, 提供高达 10Gbps 传输速率。

3 3.5mm 耳机/音频接口

输出音频信号, 用于连接耳机或喇叭, 同时兼容扩展麦克风。

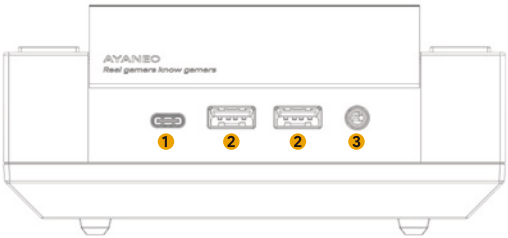

Front View

*Panel Open State

1 Full-function USB4 Type-C Port

This port is a full-function interface, providing up to 40Gbps transfer rate, suitable for devices with high bandwidth requirements. You can connect USB flash drives, mobile storage devices, or other devices equipped with a USB-C interface. Supports video casting; requires the display device to support USB-C video input and a dedicated full-function USB-C cable. Supports 4K (3840x2160@144Hz).

2 USB 3.2 Gen 2 Ports

2 * USB 3.2 Gen 2 Type-A ports, providing up to 10Gbps transfer rate.

3 3.5mm Headphone/Audio Jack

Outputs audio signals for connecting headphones or speakers, and is also compatible with an external microphone.

后视图

1 USB-C 电源输入接口

适配器通过 USB-C 电源输入接口给 AYANEO Retro Mini PC AM02 供电说明: 电源适配器会根据具体型号与国家或地区而不同。请务必使用附带的电源适配器。

2 RJ45 网络接口

标准以太网网络接口, 支持10/100/1000Mbps。

3 RJ45 网络接口 (2.5G)

高速以太网网络接口, 支持10/100/1000/2500Mbps。

4 HDMI 2.0 接口

高清视频输出接口, 将您的 AYANEO Retro Mini PC AM02 连接至高清显示器, 最高支持 4K 分辨率(3840x2160@60Hz)。说明: 包装附带 1 * HDMI 高清连接线。

5 DP 1.4 (DisplayPort) 接口

高清数字视频输出接口, 支持 4K 分辨率 (3840x2160@144Hz)。

6 USB 2.0 接口


2 * USB 2.0 Type-A 接口, 提供 480Mbps 传输速率。

7 锁孔

通过使用适配的锁和钢缆, 将 AYANEO Retro Mini PC AM02 固定在桌面或其他固定物体上, 防止被盗。

8 主动散热出风孔

散热风扇将 AYANEO Retro Mini PC AM02 处理器工作时的热量通过出风孔排放至机身外部空气中。注意: 运行时散热孔请勿被任何物品遮挡, 以免造成机器过热影响散热效能。

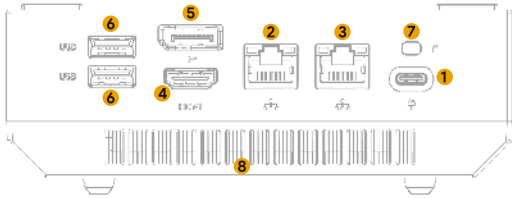

Rear View

1 USB-C Power Input Port

The adapter powers the AYANEO Retro Mini PC AM02 through the USB-C power input port. Note: The power adapter may vary depending on the specific model and country or region. Be sure to use the included power adapter.

2 RJ45 Network Ports

Standard Ethernet port, supporting 10/100/1000Mbps.

3 RJ45 Network Port (2.5G)

High-speed Ethernet port, supporting 10/100/1000/2500Mbps.

4 HDMI 2.0 Port

High-definition video output port; connect your AYANEO Retro Mini PC AM02 to an HD display, supporting up to 4K resolution (3840x2160@60Hz). Note: 1 * HDMI high-definition cable is included in the package.

5 DP 1.4 (DisplayPort) Port

High-definition digital video output port, supporting 4K resolution (3840x2160@144Hz).

6 USB 2.0 Ports


2 * USB 2.0 Type-A ports, providing a transfer rate of 480Mbps.

7 Lock Hole

Secure the AYANEO Retro Mini PC AM02 to a desk or other fixed object using the appropriate lock and cable to prevent theft.

8 Active Cooling Exhaust Vent

The cooling fan expels the heat generated by the AYANEO Retro Mini PC AM02 processor during operation through the exhaust vent. Caution: Do not block the cooling vents during operation to avoid overheating and impact on cooling efficiency.

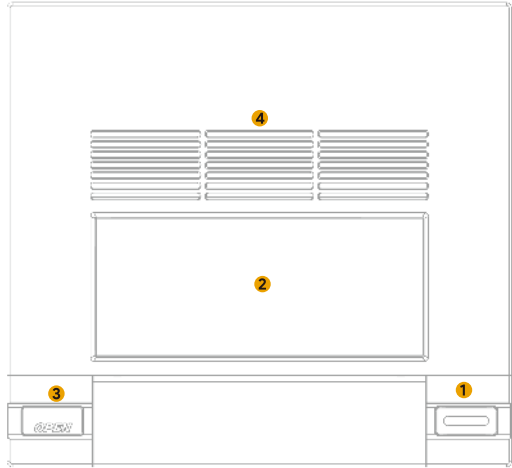

顶视图

1 电源按键/电源指示灯

点按顶部电源按键将 AYANEO Retro Mini PC AM02 开启，正常工作后指示灯亮白色。
正常工作时点按电源按键 AYANEO Retro Mini PC AM02 进入睡眠待机状态，睡眠时散热风扇停止转动，电源指示灯不亮。
长按约 8 秒钟可将 AYANEO Retro Mini PC AM02 强制关闭。正常使用场景不推荐强制关闭操作，此操作可能会造成数据损坏等不可逆的风险。

2 信息显示屏

显示 AYANEO Retro Mini PC AM02 运行时处理器及机身状态等信息，支持单点、滑动触摸交互。
具体显示配置参数及界面交互请以最新软件版本更新为准。

3 OPEN 键

按下按键将前挡板开启，挡板开启后可以正常连接使用前面板的扩展接口。

4 顶部被动散热孔

AYANEO Retro Mini PC AM02 运行时通过散热孔将内部产生热量通过空气循环排到机箱外部。
注意：运行时散热孔请勿被任何物品遮挡，可能会造成机器过热影响散热效能。

Top View

1 Power Button/Power Indicator Light

Press the top power button to turn on the AYANEO Retro Mini PC AM02; the indicator light turns white during normal operation.
Press the power button during normal operation to put the AYANEO Retro Mini PC AM02 into sleep mode; the cooling fan stops rotating, and the power indicator light turns off during sleep.
Long press for about 8 seconds to force shut down the AYANEO Retro Mini PC AM02. Force shutdown is not recommended in normal usage scenarios as it may cause irreversible risks such as data corruption.

2 Information Display Screen

Displays information about the AYANEO Retro Mini PC AM02, such as processor and system status. Supports single-tap and swipe touch interactions. Specific display configuration parameters and interface interactions are subject to the latest software version.

3 OPEN Button

Press this button to open the front panel, allowing access to the front panel's expansion ports.

4 Top Passive Cooling Vents

During operation, the AYANEO Retro Mini PC AM02 expels internal heat through these vents via air circulation.
Caution: Do not block the cooling vents during operation to avoid overheating and impact on cooling efficiency.

底视图

1 主动散热进风孔

在 AYANEO Retro Mini PC AM02 运行时，散热风扇通过进风口吸入冷空气，空气流动通过散热模组鳍片带走处理器工作时的热量并传递到外部空气中。
注意：不同策略风扇转动会产生不同的噪音大小。运行时散热孔请勿被任何物品遮挡，以免影响整机的散热效能。

2 壁挂螺丝孔

用于安装显示器上的支架或者挂架，孔位适配 M3 规格的螺丝，孔距离 100mm。


Bottom View

1 Active Cooling Intake Vent

During operation, the cooling fan draws in cold air through the intake vents, and the air flow carries away the heat generated by the processor, transferring it to the external environment.
Caution: Different fan rotation strategies may result in different noise levels. Do not block the intake vents during operation to avoid impacting the overall cooling efficiency.

2 Wall Mount Screw Hole

Used to install brackets or mounts on a monitor. The hole is compatible with M3 screws and has a spacing of 100mm.

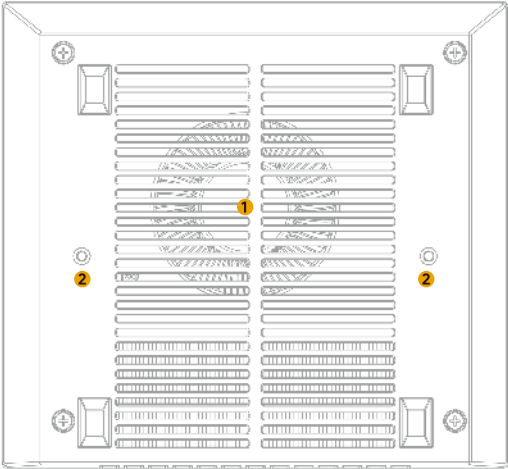

使用您的AYANEO Retro Mini PC AM02

电源供电

- A** 将 USB-C 电源线的一端连接至您的 AYANEO Retro Mini PC AM02。
- B** 将 USB-C 电源线的另一端连接至电源适配器。
- C** 电源适配器连接至 AC 100-240V 电源插座。


*为了提供更稳定的使用体验, 请务必使用包装附赠的原厂适配器和线材为 AYANEO Retro Mini PC AM02 供电, 不推荐使用第三方适配器和供电线材, 否则会出现兼容性问题。

Use Your AYANEO Retro Mini PC AM02

Power Supply

- A** Connect one end of the USB-C power cable to your AYANEO Retro Mini PC AM02.
- B** Connect the other end of the USB-C power cable to the power adapter.
- C** Connect the power adapter to an AC 100-240V power outlet.

*In order to provide a more stable using experience, please be sure to use the original adapter and cable included in the package to supply power to the AYANEO Retro Mini PC AM02, it is not recommended to use third-party adapters and power supply cables, or compatibility problems will occur.

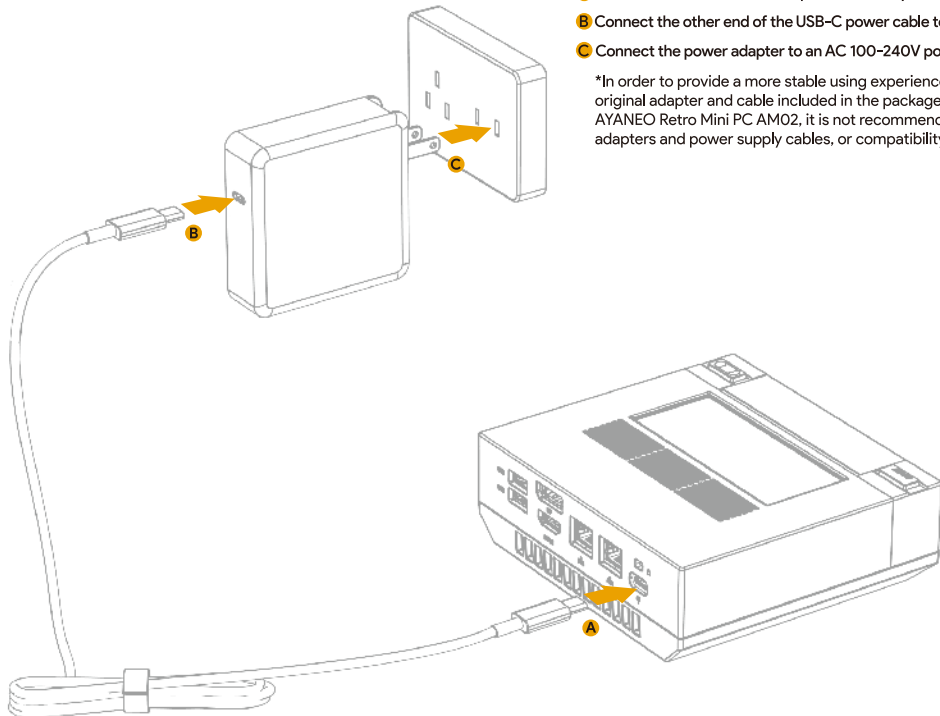

连接屏幕

AYANEO Retro Mini PC AM02 拥有以下接口可连接屏幕或者投影仪。

- 1* HDMI 2.0 4K@60Hz
- 1* DP 1.4 (DisplayPort) 4K@144Hz
- 1* USB-C 4K@144Hz

说明:

HDMI, DisplayPort 和 USB-C 接口同时连接时, 支持最多 3 个显示器同时显示。

*最高分辨率取决于不同的显示器提供的可选分辨率, 可能会受到线缆或者软件影响, 请以实际情况为准。

Connecting the Screen

AYANEO Retro Mini PC AM02 has the following interfaces to connect to a screen or projector.

- 1* HDMI 2.0 4K@60Hz
- 1* DP 1.4 (DisplayPort) 4K@144Hz
- 1* USB-C 4K@144Hz

Note:


When HDMI, DisplayPort, and USB-C interfaces are connected simultaneously, up to 3 monitors can display simultaneously.

*The maximum resolution depends on the optional resolutions provided by different monitors, and it may be affected by cables or software. Please refer to the actual situation.

通过 HDMI 接口连接屏幕

包装已附带 1* HDMI 高清线缆

Connecting the Screen via the HDMI Interface
1* HDMI high-definition cable is included in the package

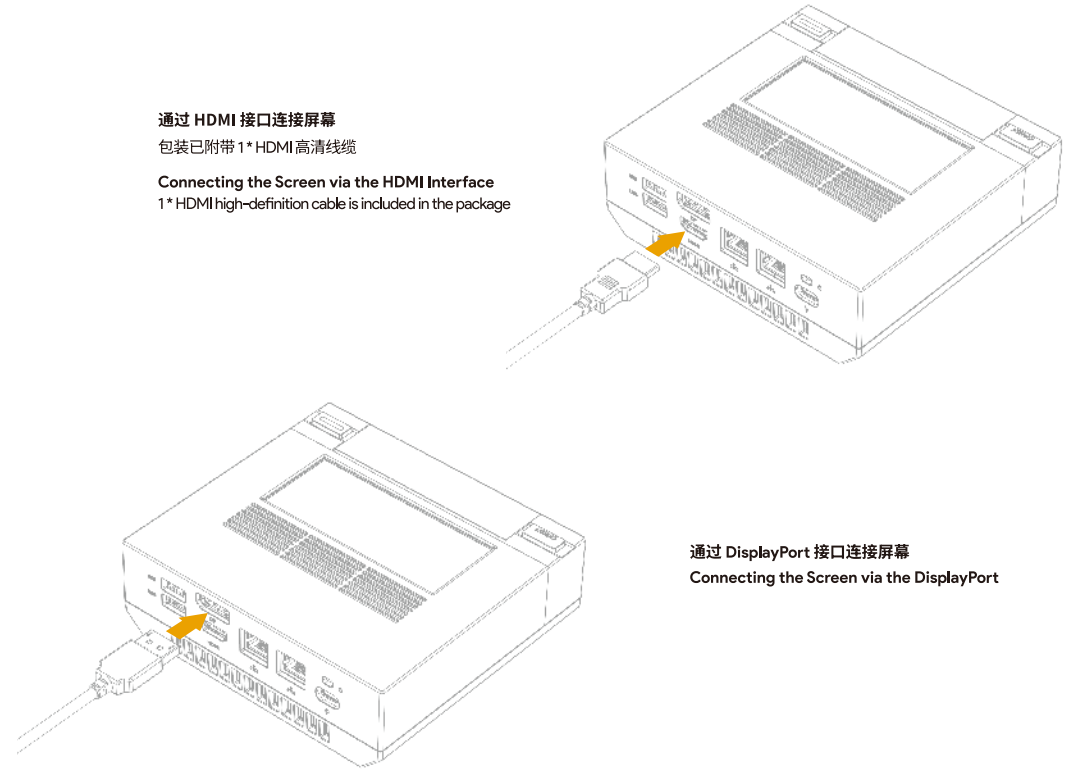

通过 DisplayPort 接口连接屏幕


Connecting the Screen via the DisplayPort

通过 USB-C 接口连接屏幕

需要显示设备支持 USB-C 视频源输入和专用全功能 USB-C 连接线，具体查阅显示器参数说明。

Connecting the Screen via USB-C Interface

Requires the display device to support USB-C video input and a dedicated full-function USB-C cable. Refer to the monitor specifications for details.

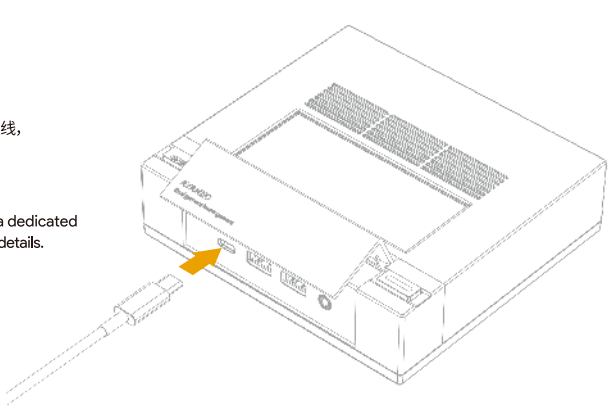


通过 USB 连接键盘与鼠标

在使用 AYANEO Retro Mini PC AM02 前您需要准备 USB 有线或者无线键盘鼠标，无线键鼠套件通过蓝牙连接或者 USB 接收器工作，USB 有线键鼠套件则直接通过线缆连接至 AYANEO Retro Mini PC AM02 背面板或者前面板的 USB-A 接口。

Connecting Keyboard and Mouse via USB

Before using AYANEO Retro Mini PC AM02, you need to prepare a USB wired or wireless keyboard and mouse. Wireless keyboard and mouse kits work through Bluetooth connection or USB receivers. USB wired keyboard and mouse kits connect directly to the USB-A interface on the rear or front panel of AYANEO Retro Mini PC AM02.

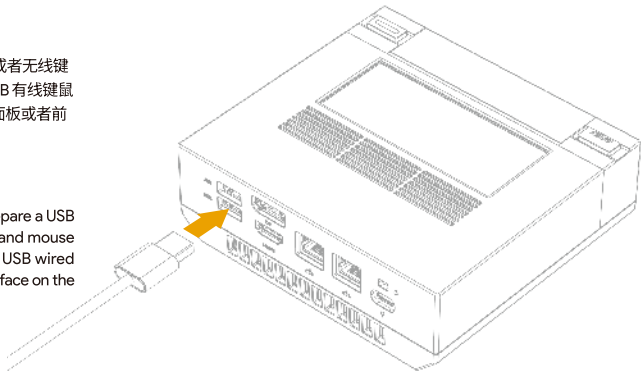

启动您的 AYANEO Retro Mini PC AM02

在正确连接电源、显示器和键盘、鼠标后，按下电源按钮来启动您的 AYANEO Retro Mini PC AM02。

Start your AYANEO Retro Mini PC AM02

After correctly connecting the power, display, keyboard, and mouse, press the power button to start your AYANEO Retro Mini PC AM02.

升级您的 AYANEO Retro Mini PC AM02

AYANEO Retro Mini PC AM02 支持安装升级内存条、固态硬盘 (SSD) 与无线网卡。如您选购配置为准系统则不包含内存条与固态硬盘，需要额外购买内存条与固态硬盘后进行安装。在安装升级前，请确保已断开 AYANEO Retro Mini PC AM02 电源，并移除所有连接设备的线材。建议您在专业人员的指导下安装或升级，如遇到问题请与 AYANEO 联系获得进一步的协助与支持。
说明：以下图示仅供参考，接口配置和部分细节会因不同的型号配置而有所差异。

Update Your AYANEO Retro Mini PC AM02


AYANEO Retro Mini PC AM02 supports upgrading the memory, SSD, and wireless network card. If you purchase a Barebone configuration, it does not include memory and SSD, so you'll need to purchase and install them separately. Before performing any upgrades, make sure to disconnect the power to your AYANEO Retro Mini PC AM02 and unplug all connected devices. We recommend having a professional guide you through the installation or upgrades. If you encounter any issues, please contact AYANEO for further assistance and support.
Note: Please note that the following illustrations are for reference, and the interface configuration and some details may vary depending on the specific model's configuration.

拆卸底部盖板

- 1 将 AYANEO Retro Mini PC AM02 机身顶部朝下平稳放置，卸除底部盖板的四颗螺丝。
- 2 取出盖板。

Disassembling the Bottom Cover

- 1 Place the AYANEO Retro Mini PC AM02 with the top side facing down and steadily remove the four screws from the bottom cover.
- 2 Take out the cover.

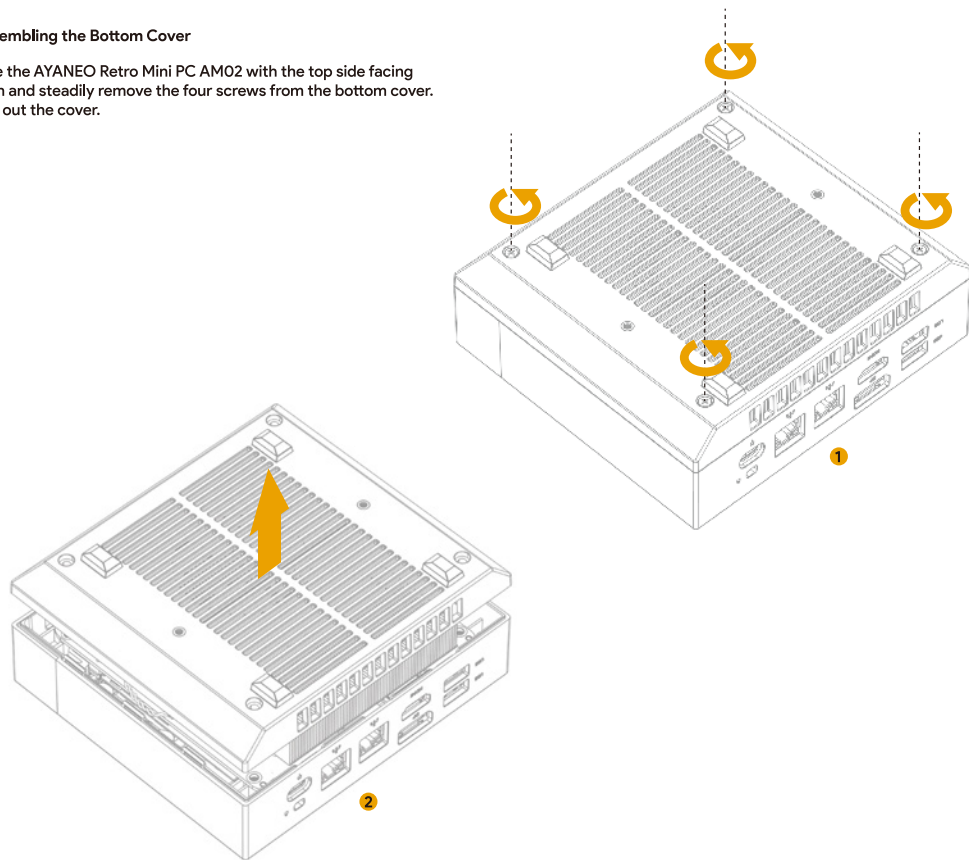



装回底部盖板

- 1 注意盖板朝向，将盖板对齐装回外壳，沿四周压按盖板边缘使其装配到位。
- 2 锁紧盖板四颗螺丝。

Reassembling the Bottom Cover

- 1 Pay attention to the orientation of the cover, align it with the outer shell, and press the edges of the cover around to assemble it into place.
- 2 Tighten the four screws on the cover.

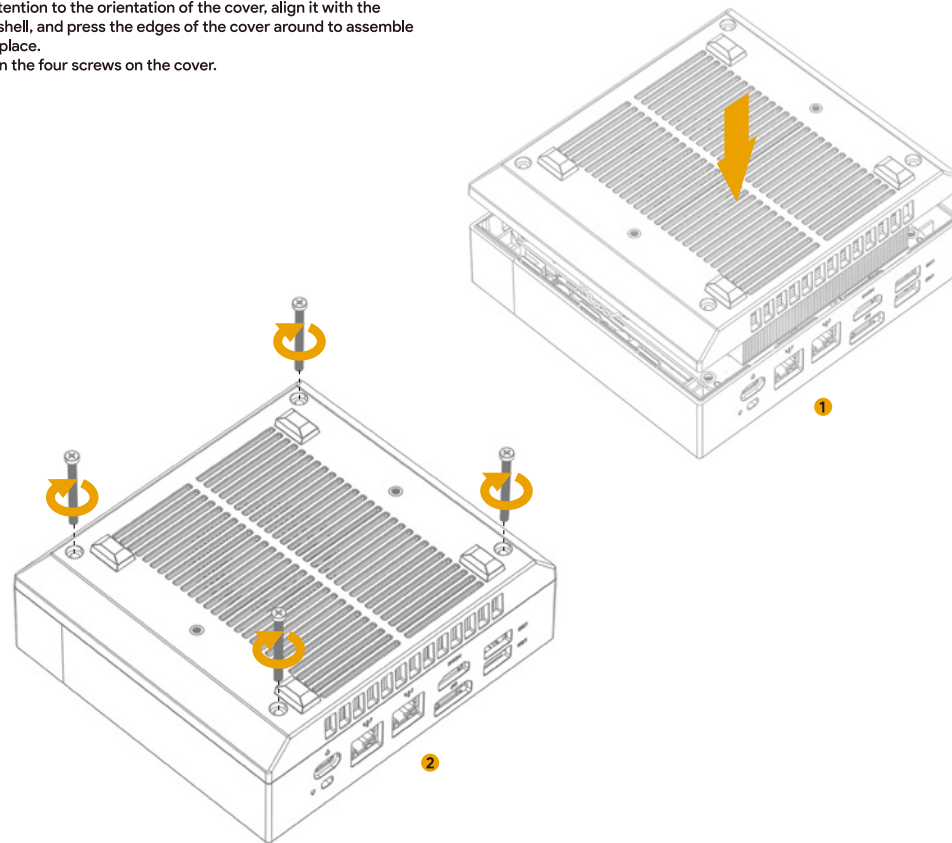


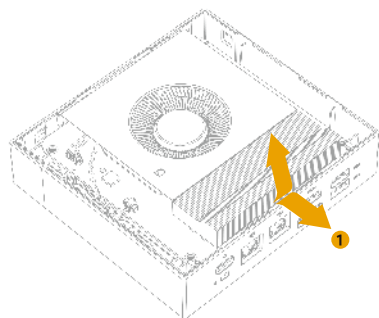


取出 AYANEO Retro Mini PC AM02 主板

- ① 扳动后置接口挡板边缘,分离后置挡板与主板接口的衔接,同时从鳍片处向上掀起主板。
- ② 正常掀起后并取出主板,取出时注意主板与机身连接线缆,避免拉扯损坏。
- ③ 升级更换 SSD 与内存网卡时无需断开主板与机身连接线缆,并排平放可进行正常升级更换操作。

Removing the AYANEO Retro Mini PC AM02 Motherboard

- ① Pull the edge of the rear interface baffle to separate it from the motherboard interface, and lift the motherboard upward from the fin area.
- ② Lift and remove the motherboard, taking care not to pull or damage the cables connecting the motherboard to the chassis.
- ③ When upgrading or replacing the SSD and memory card, there is no need to disconnect the cables between the motherboard and the chassis. You can perform the upgrade or replacement operation with the motherboard placed flat.

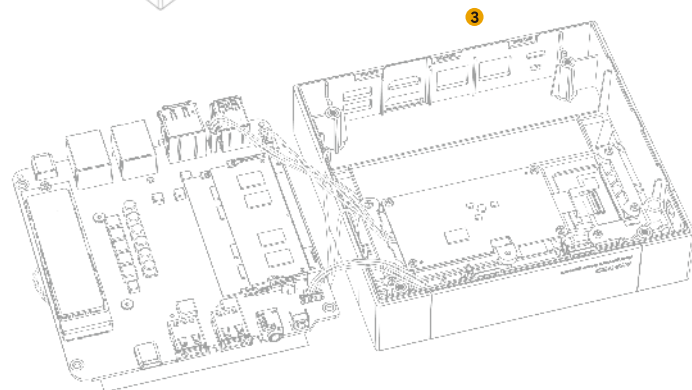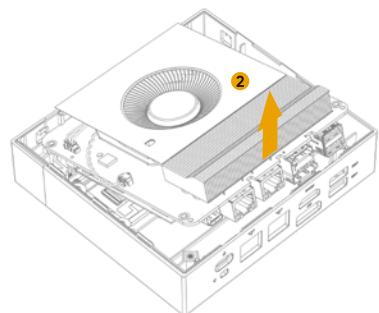

装回 AYANEO Retro Mini PC AM02 主板


装回主板前请检查主板与机箱连接线的连接情况,连接线安装不到位会影响功能正常使用,甚至会导致无法正常开机。

- ① 信息显示屏通讯连接线,未连接或者连接不到位会影响显示功能。
 - a. 线缆对应颜色 - 黄
 - b. 线缆对应颜色 - 黑
 - c. 线缆对应颜色 - 红
- ② 信息显示屏供电连接线,未连接或者连接不到位会影响显示功能。
 - a. 线缆对应颜色 - 红
 - b. 线缆对应颜色 - 黑
- ③ 电源按键/电源指示灯连接线,未连接或者连接不到位会导致无法开机。
- ④ 无线网卡同轴线,未连接会影响信号接收,从而直接影响网络传输性能。
 - a. 线缆对应颜色 - 灰
 - b. 线缆对应颜色 - 黑

Removing the AYANEO Retro Mini PC AM02 Motherboard


Before reinstalling the motherboard, please check the connection of the motherboard to the chassis. Poor cable installation may affect normal functionality or prevent the system from booting properly.

- ① Information display screen communication cable - Incorrect or loose connection may affect display functionality.
 - a. Cable corresponding color - Yellow
 - b. Cable corresponding color - Black
 - c. Cable corresponding color - Red
- ② Information display screen power supply cable - Incorrect or loose connection may affect display functionality.
 - a. Cable corresponding color - Red
 - b. Cable corresponding color - Black
- ③ Power button/power indicator cable - Incorrect or loose connection may prevent the system from turning on.
- ④ Wireless network card coaxial cable - Not connecting may affect signal reception and directly impact network transmission performance.
 - a. Cable corresponding color - Gray
 - b. Cable corresponding color - Black

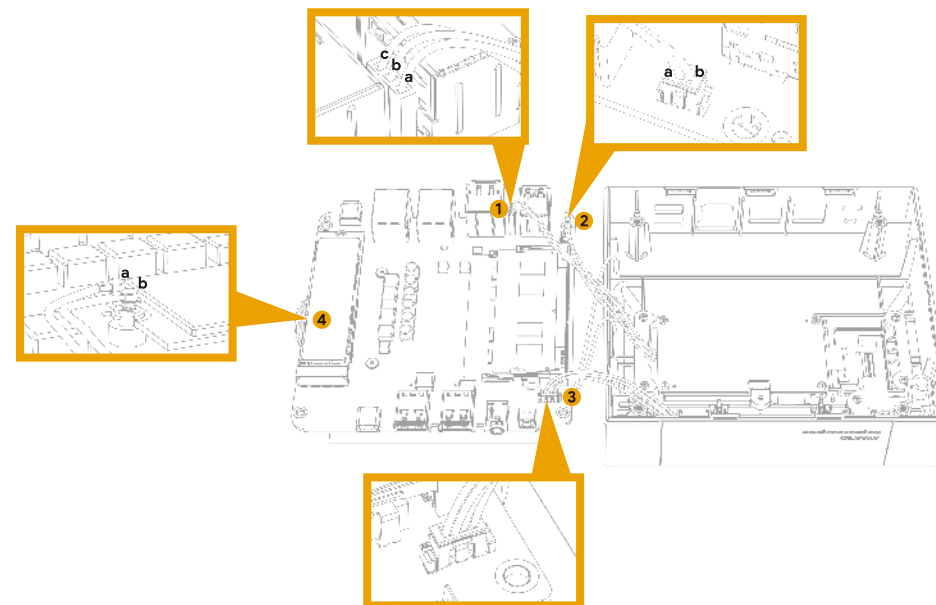


⑤ 将主板倾斜对齐前置接口, 平稳放置。

⑥ 扳动后置接口挡板边缘, 同时轻下压主板鳍片区域使主板接口对齐并到位, 在装配时注意不要压到主板与机身的连接线缆。

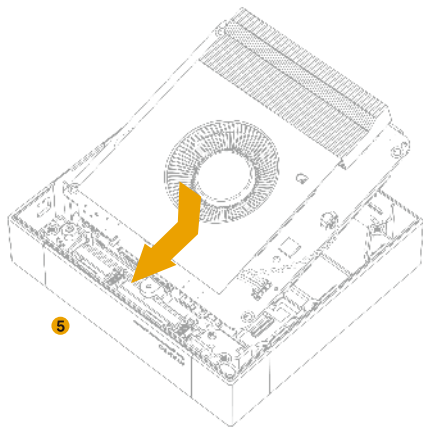

⑤ Tilt the motherboard to align with the front interface, then gently place it flat.

⑥ Pull the edge of the rear interface baffle and simultaneously press down on the fin area of the motherboard to align and secure the motherboard in place. Be careful not to press on the cables connecting the motherboard to the chassis during assembly.

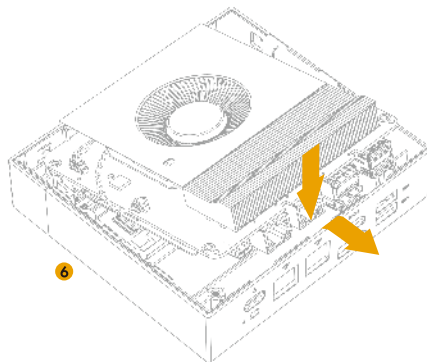

升级或安装 M.2 SSD 固态硬盘

您的 AYANEO Retro Mini PC AM02 拥有一个 NVMe M.2 PCIe 4.0 *4 的插槽, 支持安装或升级 2280 规格的 SSD。

说明: AYANEO Retro Mini PC AM02 在进行安装升级 M.2 SSD 前需要先把主板取出

a. 将 SSD 倾斜对齐装入主板 M.2 卡槽。

b. 对准并固定好 SSD 的缺口与螺柱之后, 使用螺丝锁紧 SSD, 完成安装。


Upgrading or Installing M.2 SSD

Your AYANEO Retro Mini PC AM02 has an NVMe M.2 PCIe 4.0 *4 slot, supporting the installation or upgrade of SSDs with a 2280 specification.

Note: Before installing or upgrading the M.2 SSD, it's necessary to remove the motherboard from the AYANEO Retro Mini PC AM02.

a. Tilt the SSD to align it with the M.2 slot on the motherboard.

b. Once aligned and secured with the notches and screws, use screws to tighten the SSD in place, completing the installation.

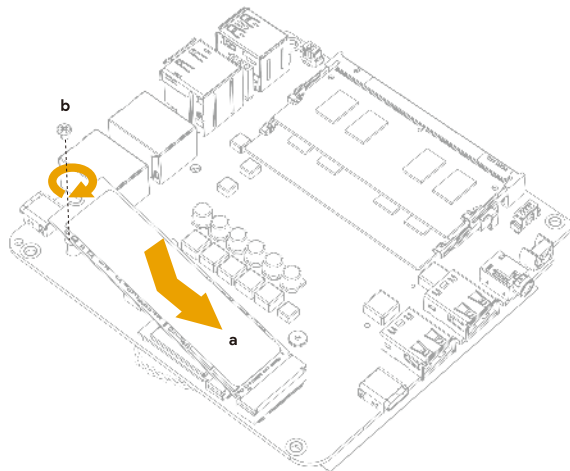

取出 M.2 SSD


a. 卸除 SSD 锁定螺丝。

b. 倾斜取出 SSD。

Removing the M.2 SSD

a. Remove the locking screws securing the SSD.

b. Tilt and remove the SSD.

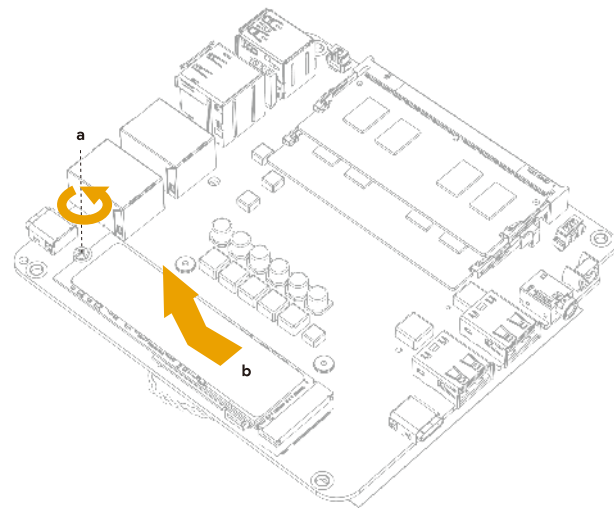

升级或安装内存

您的 AYANEO Retro Mini PC AM02 拥有两个 DDR5 SO-DIMM 内存插槽, 支持单根或者两根内存组合。


建议以两根内存组合使用, 在某些应用及场景下可获得显著的性能提升。

• 将内存条倾斜对齐装入主板 SO-DIMM 插槽, 然后下压内存条使两端扣位锁定内存条。

Upgrading or Installing Memory

Your AYANEO Retro Mini PC AM02 has two DDR5 SO-DIMM memory slots, supporting a single or dual memory module configuration. It is recommended to use two memory modules for significant performance improvements in certain applications and scenarios.

• Tilt the memory module to align it with the SO-DIMM slot on the motherboard, then press down on the memory module to lock it in place with the retention clips.


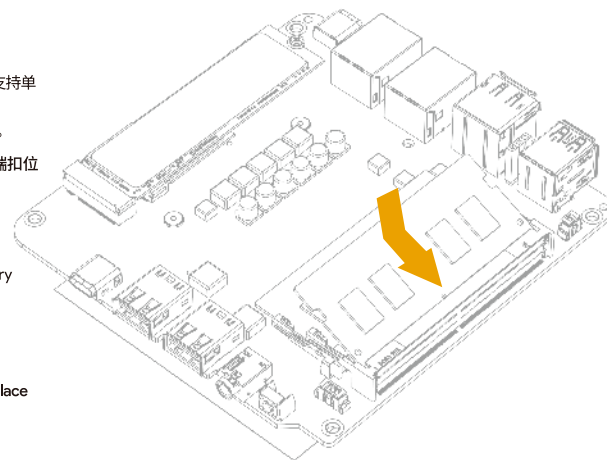


取出内存

- a. 左右向外拨动锁定扣位, 使内存条脱离扣位受到插槽应力倾斜。
- b. 取出内存条。

Removing Memory

- a. Push outward on the locking clips on both sides to release the memory module, allowing it to tilt and be removed from the slot.
- b. Remove the memory module.

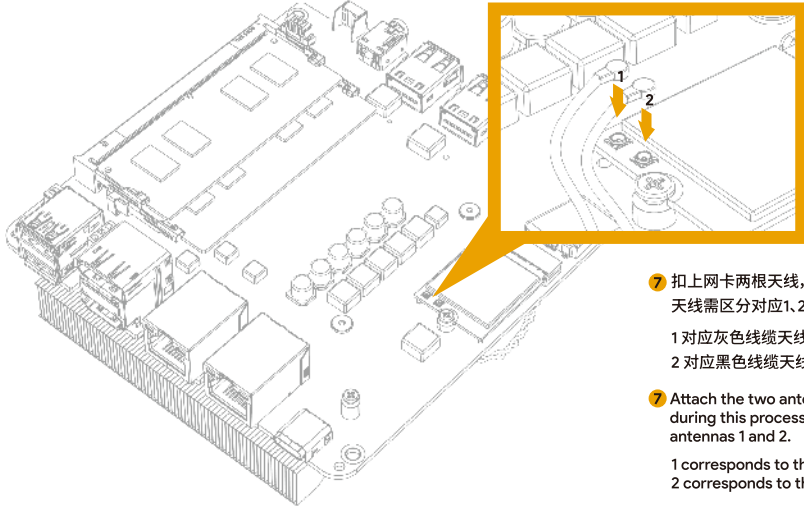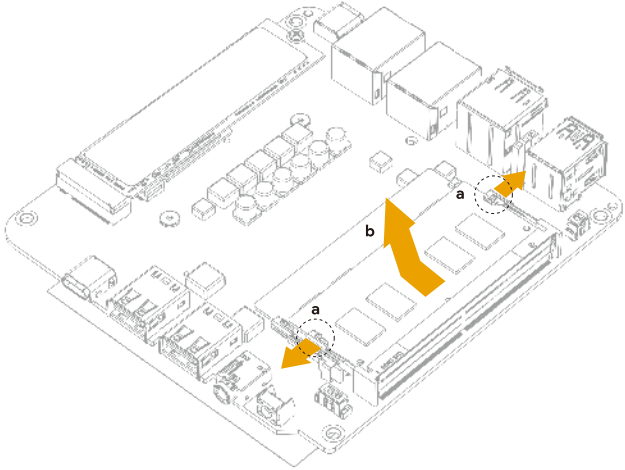

- 扣上网卡两根天线, 过程中请注意力度, 以免造成损坏。天线需区分对应1、2。
1 对应灰色线缆天线
2 对应黑色线缆天线
- Attach the two antennas to the network card; be cautious during this process to avoid damage. Differentiate between antennas 1 and 2.
1 corresponds to the gray cable antenna
2 corresponds to the black cable antenna

升级或安装无线网卡


您的 AYANEO Retro Mini PC AM02 支持升级更换 M.2 2230 规格的无线网卡。在升级前请先确认所选无线网卡对 AMD 平台的兼容性, 详询网卡供应商。

- a. 将无线网卡倾斜对齐齐主板装进 M.2 卡槽。
- b. 对准并固定好网卡的缺口与螺柱之后, 使用螺丝锁紧。

Upgrading or Installing Wireless Network Card

Your AYANEO Retro Mini PC AM02 supports upgrading to an M.2 2230 specification wireless network card. Before upgrading, confirm the compatibility of the selected wireless network card with the AMD platform; consult the network card supplier for details.

- a. Tilt the wireless network card to align it with the M.2 slot on the motherboard.
- b. Once aligned and secured with the notches and screws, use screws to tighten the network card in place.

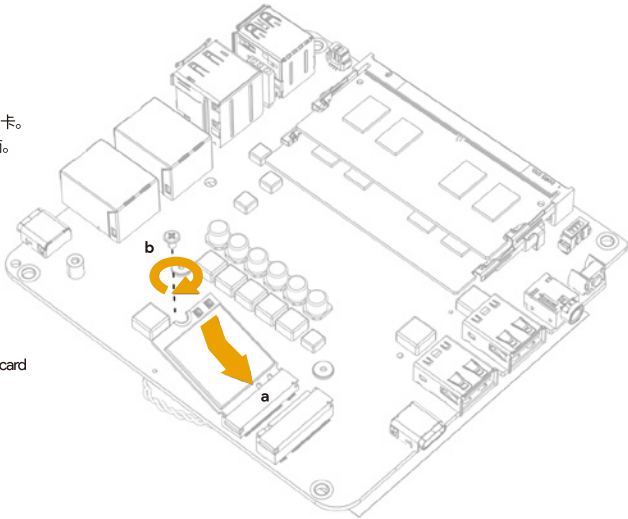


取出网卡

- a. 卸除网卡锁定螺丝。
 - b. 倾斜取出网卡。
- 取出网卡前先断开天线, 过程中注意力度, 以免造成损坏。

Removing the Network Card

- a. Remove the locking screws securing the network card.
 - b. Tilt and remove the network card.
- Disconnect the antenna before removing the network interface card, and pay attention to the strength during the process to avoid damage.

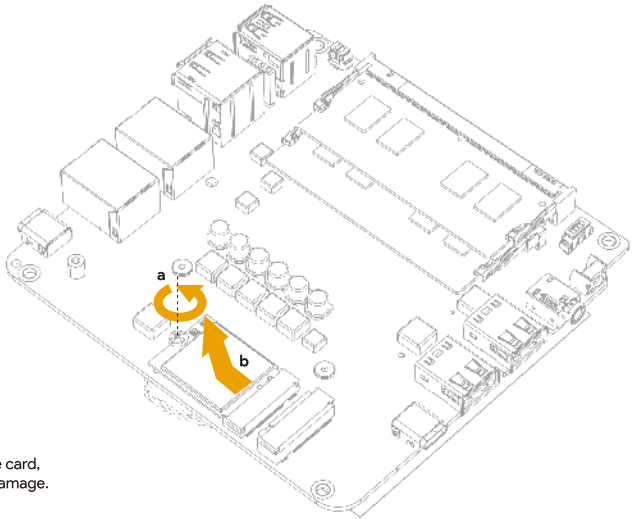

开启/关闭

- 点按顶部电源按键将您的 AYANEO Retro Mini PC AM02 开启, 正常工作后指示灯亮白色, 同时机身顶部的屏幕显示启动画面。
- 鼠标左键单击「视窗键」, 在弹出窗口选择“关机图标”, 弹出的选单选择“关机图标”关机 将您的 AYANEO Retro Mini PC AM02 关闭。
- 若您的 AYANEO Retro Mini PC AM02 出现无响应的情况, 可长按约 8 秒钟可将 AYANEO Retro Mini PC AM02 强制关闭。正常使用时不建议进行强制关闭操作, 此操作可能会造成数据损坏等不可逆的风险。

睡眠/唤醒

- 在正常工作时, 点按电源按键 AYANEO Retro Mini PC AM02 将进入睡眠待机状态。睡眠时散热风扇停止转动, 电源指示灯熄灭。
- 在睡眠状态下, 点按电源按键将 AYANEO Retro Mini PC AM02 唤醒, 此时电源指示灯常亮, 散热风扇恢复正常转动。

进入 BIOS 设置

- 如果需要修改 AYANEO Retro Mini PC AM02 的 BIOS 设置, 在开机时反复按 Delete 键即可进入。反复按 F7 键则可以打开快速启动项选择菜单。
- 在可以正常使用 AYANEO Retro Mini PC AM02 时, 不建议您对 BIOS 设置进行修改, 出厂的默认设置即可保证在最佳状态下运行。

注意: 不当的 BIOS 设置会影响系统稳定性或者引起开机失败, 建议在相关专业人员协助下进行 BIOS 设置。

Power On/Off

- Press the top power button to turn on your AYANEO Retro Mini PC AM02. Once in normal operation, the indicator light will be white, and the screen on the top of the device will display the startup screen.
- For shutdown, left-click the "Start" button on the mouse, select the "Power" icon in the pop-up window, and choose "Shut Down" from the menu. This action will prompt your AYANEO Retro Mini PC AM02 to power off.
- In the event of unresponsiveness, if your AYANEO Retro Mini PC AM02 is not responding, you can force a shutdown by long-pressing for approximately 8 seconds. It is not recommended to force a shutdown during normal use, as this action may pose irreversible risks such as data corruption.

Sleep/Wake

- While in normal operation, pressing the power button on your AYANEO Retro Mini PC AM02 will put it into sleep mode. In this state, the cooling fan stops spinning, and the power indicator light goes off.
- To wake up your AYANEO Retro Mini PC AM02 from sleep, simply press the power button. The power indicator light will be steady, and the cooling fan will resume its normal operation.

Accessing BIOS Settings

- To modify the BIOS settings of your AYANEO Retro Mini PC AM02, press the Delete key repeatedly during startup. Pressing the F7 key repeatedly will open the quick boot menu for selecting startup options.
- It is not recommended to modify BIOS settings unless necessary, as the default factory settings are optimized for optimal performance under normal usage conditions.

Please be cautious, as improper BIOS settings can affect system stability or lead to startup failures. If needed, it is advisable to seek assistance from a qualified professional when making BIOS adjustments.

注意事项

本产品的操作系统为微软公司出品的 Windows 11 64 位家庭版, 在桌面模式下, 通过键盘鼠标进行 Windows 的基本操作。

如果应用程序出现无响应, 无法正常关闭的情况下, 鼠标右键单击点按「视窗键」, 在弹出菜单选择任务管理器, 在任务管理器中选无响应的进程进行“结束任务”操作。

说明: 如您选购配置为准系统则不含内存硬盘无配套操作系统, 需要自行安装相应操作系统。具体操作流程按所装的系统版本说明为准。

电源供电

请使用附带的电源适配器对 AYANEO Retro Mini PC AM02 进行供电使用, 切勿使用无安全认证电源适配器, 以免造成内部元件损坏和不可预知的危险。

当电源适配器接入 AC 100-240V 电源时 USB-C 输出端应当避免皮肤与插头长时间接触, 否则可能会引起不适或受伤。

医疗设备干扰

AYANEO 内部部分元件包含磁体及无线电发射电磁场, 这些电磁场可能会干扰医疗设备、心脏起搏器、除颤器或其他医疗设备。请在医疗设备和 AYANEO Retro Mini PC AM02 之间保持一定的安全距离。

请咨询您的医师和医疗设备制造商以获得医疗设备信息。如怀疑 AYANEO Retro Mini PC AM02 干扰您的心脏起搏器、除颤器或者其他医疗设备, 请及时停止使用。

AYANEO 保证所附硬件产品和配件, 从原零售购入的日期起一年内, AYANEO 对正常磨损不作担保, 对事故或滥用造成的损坏也不做担保。若要获取服务, 请访问 AYANEO 商城或者 AYANEO 授权服务提供商, 可用的服务选项取决于请求的服务所在的国家或地区, 并且可能限制为销售的原始国家和地区。可能需要支付通话费用和国际运费, 这取决于您的位置。

当您根据保修服务政策提交有效的索赔时, AYANEO 将为您 AYANEO Retro Mini PC AM02 酌情进行维修, 更换或退款等服务。您享有的保修权益是附加在本地消费者法律所提供的权力以外的。当您根据本保修政策提出索赔时, 可能需要提供购买凭证的详细信息。

Notes

This product runs on a 64-bit Windows 11 Home edition produced by Microsoft. In desktop mode, you can perform basic Windows operations using a keyboard and mouse.

If applications become unresponsive and can't be closed normally, you can right-click the "Start" button and select "Task Manager" from the pop-up menu. In the Task Manager, you can choose the unresponsive process and select "End Task" to terminate it.

Note: If you purchase a base system configuration without memory or hard drive and it doesn't include an operating system, you will need to install the operating system yourself. The specific installation process will depend on the version of the operating system you choose.

Power Supply

Please use the provided power adapter to power your AYANEO Retro Mini PC AM02. Do not use uncertified power adapters, as this can lead to damage to internal components and unforeseen risks.

When the power adapter is plugged into an AC 100-240V power source, avoid prolonged skin contact with the USB-C output plug to prevent discomfort or injury.

Medical Device Interference

Some internal components of AYANEO contain magnets and emit electromagnetic fields. These electromagnetic fields may interfere with medical devices, pacemakers, defibrillators, or other medical equipment. Please maintain a safe distance between medical devices and the AYANEO Retro Mini PC AM02.

Consult with your physician and the manufacturer of your medical device for specific information. If you suspect that the AYANEO Retro Mini PC AM02 is interfering with your pacemaker, defibrillator, or other medical equipment, discontinue use promptly.

AYANEO guarantees its hardware products and accessories for one year from the original retail purchase date. AYANEO does not provide warranties for normal wear and tear or damages caused by accidents or misuse. To obtain service, visit the AYANEO store or an authorized service provider. Available service options depend on the country or region where the service is requested and may be limited to the original country or region of sale. Call charges and international shipping fees may apply, depending on your location.

When you submit a valid claim under the warranty service policy, AYANEO will, at its discretion, provide repair, replacement, or refund services for your AYANEO Retro Mini PC AM02. Your warranty rights are additional to the rights provided by local consumer laws. Detailed information on the purchase receipt may be required when making a warranty claim under this policy.

支持

更多支持和故障排除信息、驱动软件及最新的 AYASpace 管理软件下载, 请访问我们的官方网站: www.ayaneo.com.cn

Support

You may consult with your local dealer for warranty and support service, and you can get online support from our website (www.ayaneo.com). Or you can contact us by service@ayaneo.com if you have any inquiries.

