

AYANEO Pocket Micro 说明书

适用于 AYANEO Pocket Micro
机型说明

AYANEO Pocket Micro
User Manual

For model of AYANEO Pocket Micro

AYANEO Pocket Micro



 
产品说明书

User Manual

适用于 AYANEO Pocket Micro
机型说明

For model of AYANEO Pocket Micro

Size 152×69mm

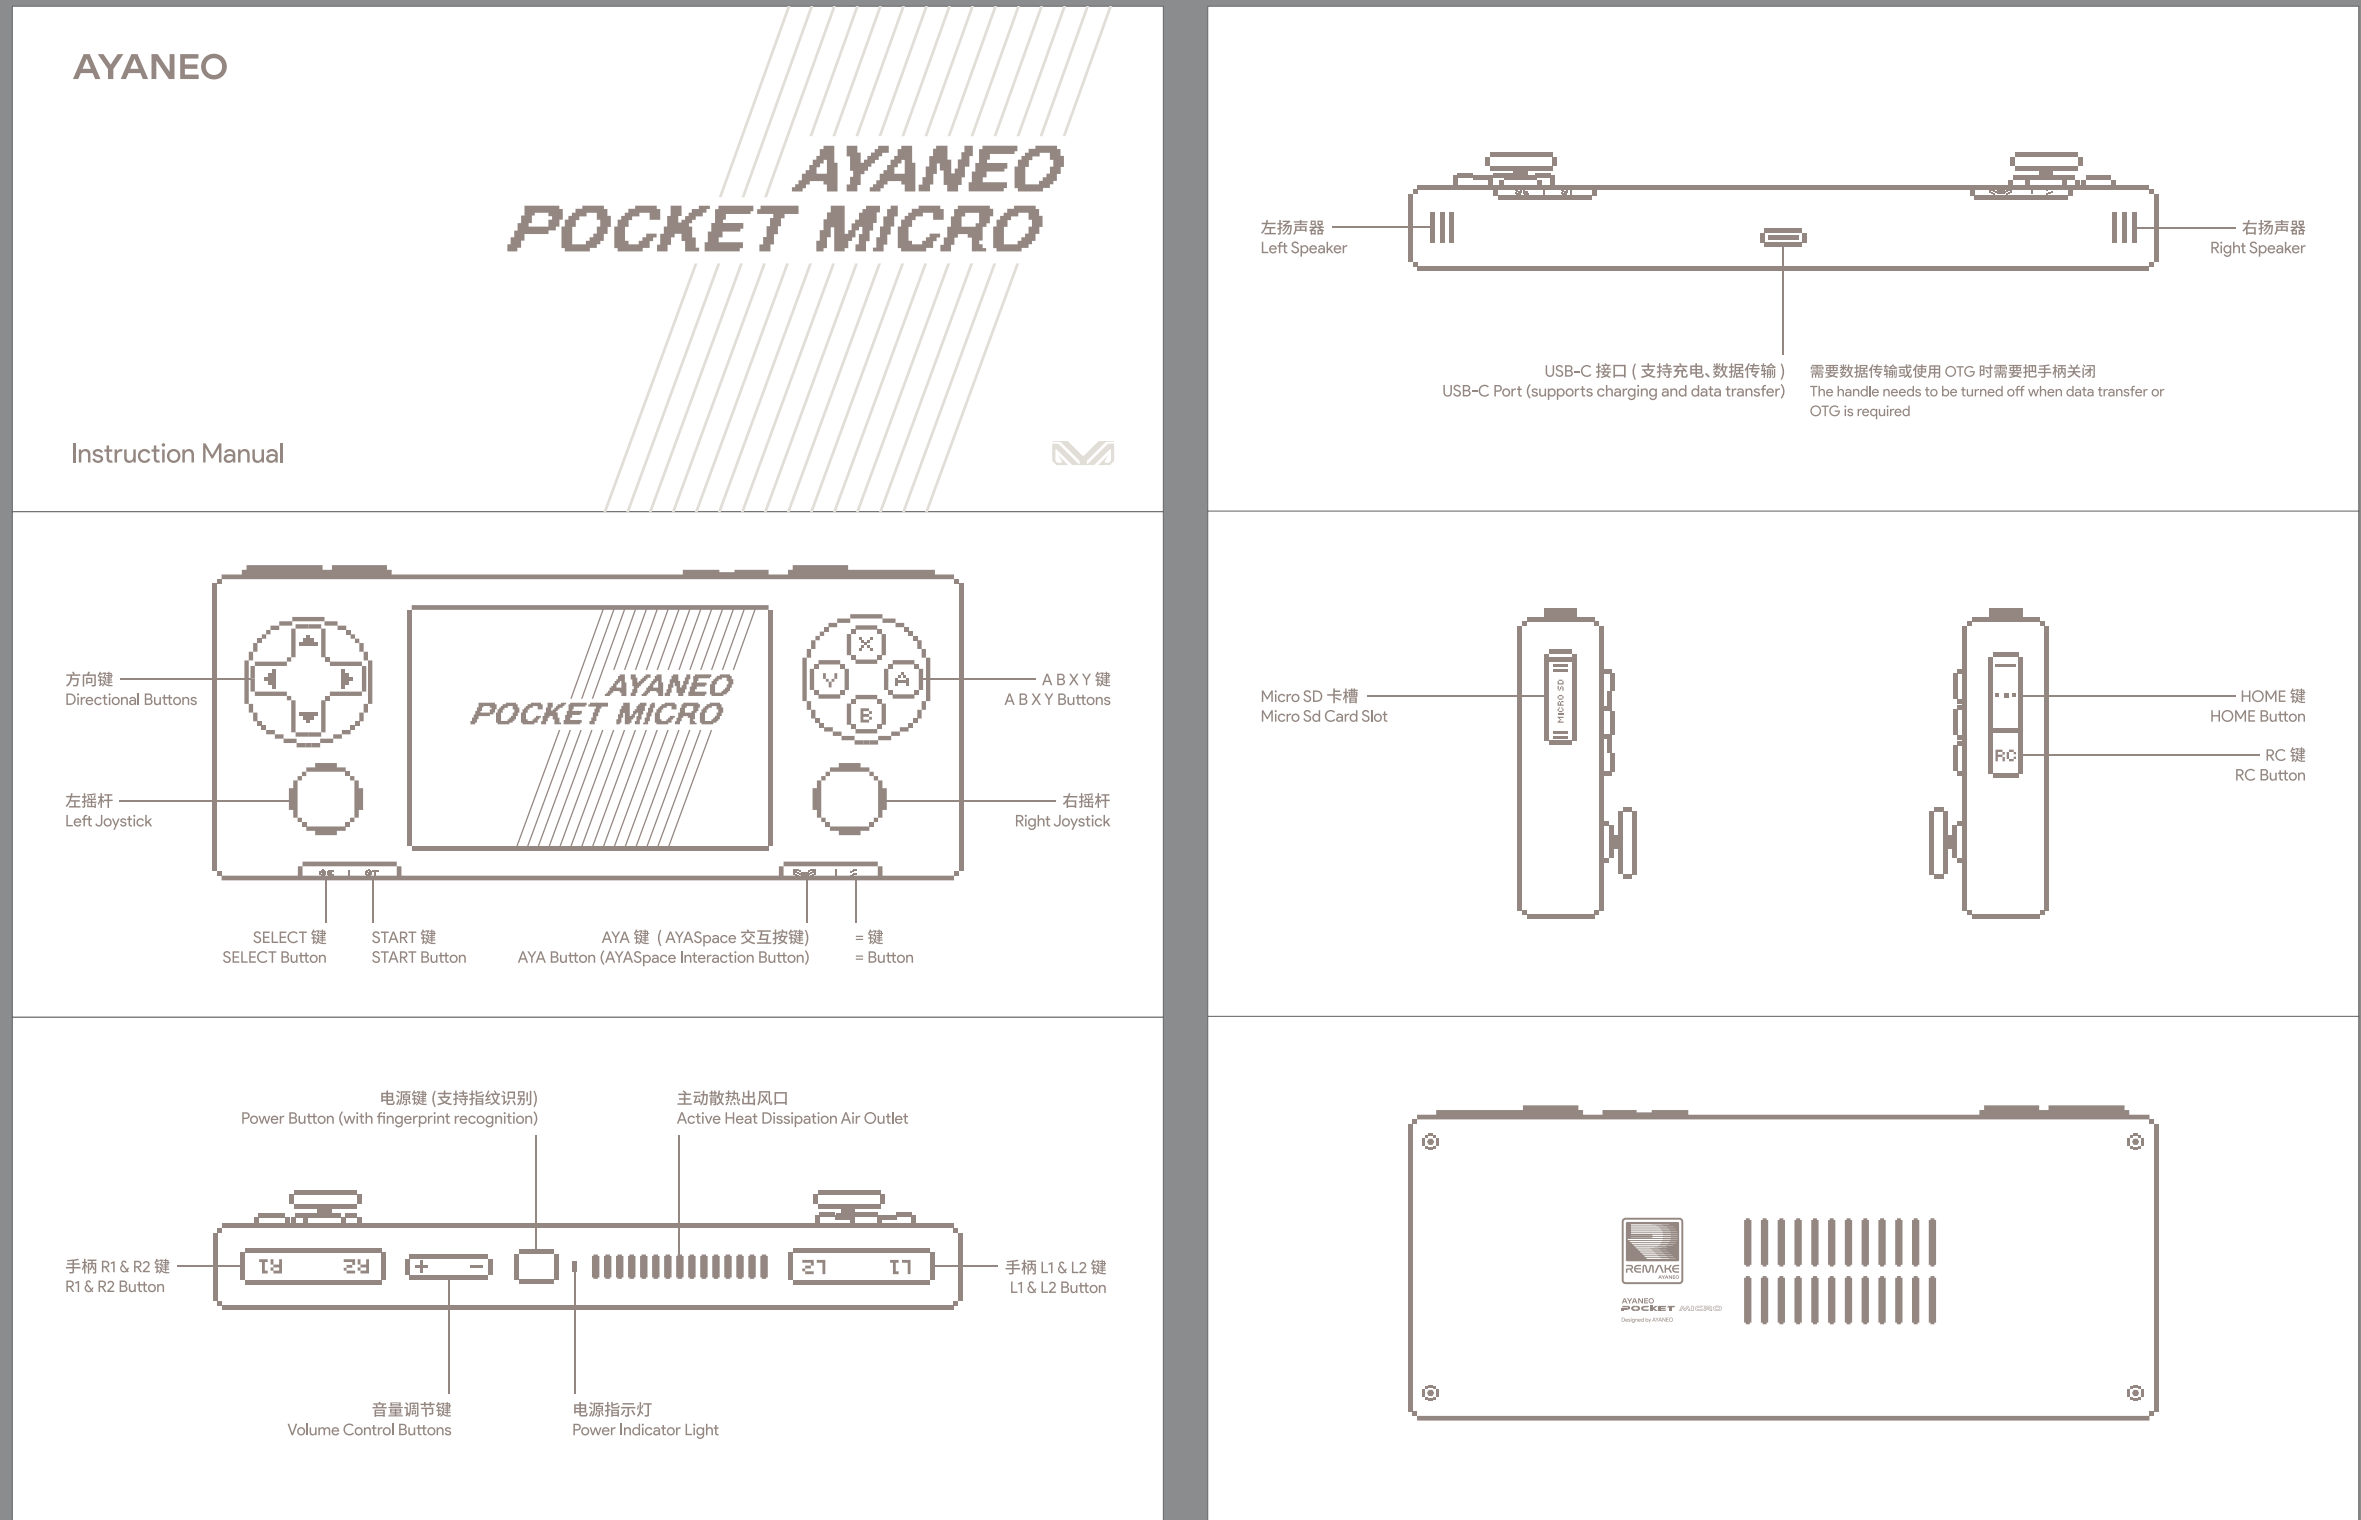

AYANEO Pocket Micro 说明书

适用于 AYANEO Pocket Micro 机型说明

AYANEO Pocket Micro User Manual

For model of AYANEO Pocket Micro




Size 152×69mm

开机 / 关机 / 重启 / 指纹




关机状态下, 按住电源按键 "  " 约 3 秒后将 AYANEO Pocket Micro 开机。

开机状态下, 按住电源按键 "  " 约 2 秒弹出的菜单选择 "  " 将 AYANEO Pocket Micro 关机, 选择 "  " AYANEO Pocket Micro 将重新启动。

需要使用安全指纹时, 设置屏幕锁定才能正常设置使用指纹识别功能。

设置 "  " > 安全 "  " > 屏幕锁定, 可选择设置图案, PIN 码或密码。然后在安全选项下选择指纹 "  ", 输入密码或 PIN 确定安全性后即可设置并录入指纹。

音量

点按音量键 "  " 音量逐级增加, 长按则连续增加音量。点按音量键 "  " 音量减小。在 "  >  提示音和振动 音量、震动、勿扰 , 可对应调节媒体音量、通知音量、闹钟音量等。

文本输入

需要输入文本时, 点击输入框即自动呼出触摸键盘, 使用触控输入文本。




下拉菜单

在屏幕顶部第一次向下滑动呼出下拉菜单, 可快速切换 WLAN、蓝牙等设置。再次向下滑动显示完整下拉快捷菜单, 滑动亮度调节滑块进行屏幕亮度调节, 可进行快捷按钮配置等操作。



网络连接 / 蓝牙

AYANEO Pocket Micro 支持 WLAN 网络, 需要通过 WLAN 连接网络时, 设置 "  " 进入设置菜单主页, 网络和互联网 > WLAN 进入并选取需要连接网络名称, 在 "安全性" 选框输入连接密码后点击 "连接" 连接到 WLAN 网络。



需连接蓝牙设备时, 设置菜单主页选择 "已连接的设备" > , "+ 新设备配对" 在搜索出列表点击需要连接的蓝牙设备。







存储扩展

AYANEO Pocket Micro 机身右侧配置有 Micro SD 存储卡扩展卡槽, 使用时翻开防尘盖后即可装配存储卡。





Power On / Off / Restart / Fingerprint




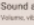
Turn on: In the off state, press and hold the power button "  " for about 3 seconds.

Turn off: In the on state, press and hold the power button "  " for about 2 seconds. In the pop-up menu, select "  " to turn off the AYANEO Pocket Micro, or select "  " to restart the AYANEO Pocket Micro.

Fingerprint security: You need to set a screen lock to use fingerprint recognition.

Go to "  " > " > " > Screen lock and choose to set a Pattern, PIN or Password. Then, select "  " under the security options, enter your Password or PIN to confirm security, and you can then set up and record your fingerprint.

Volume Control

Increase volume: Press the volume up button "  " to increase the volume one step at a time. Press and hold the button to continuously increase the volume. Decrease volume: Press the volume down button "  " to decrease the volume. To adjust volume settings: Go to "  >  Sound and vibration 音量、震动、勿扰 to adjust Media volume, Notification volume, Alarm volume, etc.

 
Text Input

When you need to enter text, tap the input box to bring up the touch keyboard. Use touch input to enter text.




DropDown Menu


Swipe down from the top of the screen to bring up the dropdown menu. You can quickly switch Internet, Bluetooth and other settings. Swipe down again to show the full dropdown shortcut menu. Slide the brightness slider to adjust the screen brightness. You can also configure shortcut buttons.

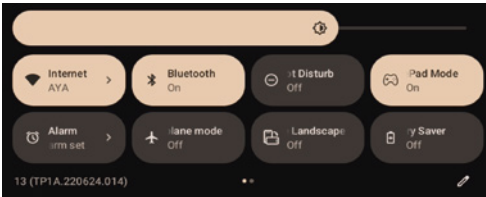

Internet / Bluetooth

 The AYANEO Pocket Micro supports WLAN networks. To connect to a WLAN network, go to "  " > Network and Internet > "Internet". Select the network you want to connect to, enter the connection password in the "Security" box, then click "Connect".



Bluetooth: To connect to a Bluetooth device, go to "  " > "Connected devices" > "+ Pair new device". Search for the Bluetooth device you want to connect to in the list and click on it.





Storage Expansion

The AYANEO Pocket Micro has a Micro SD card slot on the right side of the device. To use it, open the dust cover and insert the storage card.



Game Control / Data Transfer

When you need to transfer data through USB-C or use the OTG function, please turn off the "GamePad Mode" first.

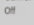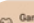Swipe down the dropdown menu. Click on "  GamePad Mode " to switch between the game controller and USB-C data function. When the USB data function is enabled, the game control function is disabled. At this time, the handle joystick and button functions are disabled. Click "  GamePad Mode " again to enable the handle control function.

Note: Because the game controller and USB-C interface data function share the same communications protocol channel, the two functions cannot be enabled at the same time. You need to switch between them through settings or through the AYASpace shortcut.

Battery and Charging

Please use a safety-certified adapter to charge your AYANEO Pocket Micro. Using an uncertified adapter may damage internal components and cause unpredictable hazards.

Avoid prolonged skin contact with the USB-C plug when it's connected to a power source, as this can cause discomfort or injury. Do not attempt to replace the AYANEO Pocket Micro battery yourself. Doing so can damage the battery, leading to overheating, fire, and personal injury.

The lithium-ion battery in the AYANEO Pocket Micro should be recycled or disposed of by AYANEO or its authorized service providers. It must be recycled separately from household waste. Please dispose of the battery according to local environmental regulations. The battery can only be replaced by AYANEO or AYANEO authorized service providers. Replacing it with a wrong battery model may cause an explosion hazard.

Cleaning

Please use a lint-free cloth to clean the AYANEO Pocket Micro. Do not allow any openings to become wet or use aerosol sprays, solvents or abrasives.

Medical Device Interference

Some components inside the AYANEO Pocket Micro contain magnets and radio-emitting electromagnetic fields. These electromagnetic fields may interfere with medical devices, pacemakers, defibrillators or other medical devices. Please maintain a safe distance between medical devices and the AYANEO Pocket Micro. Consult your doctor and medical device manufacturer for more information about medical devices. If you suspect that the AYANEO Pocket Micro is interfering with your pacemaker, defibrillator or other medical device, please stop using the AYANEO Pocket Micro.

AYANEO warrants the included hardware products and accessories for one year from the original retail purchase date. AYANEO does not warrant against normal wear and tear, or damage caused by accident or misuse. For service, please visit the AYANEO store or an AYANEO authorized service provider. Available service options depend on the country or region where the service is requested and may be limited to the original country and region of sale. Call charges and international shipping costs may apply, depending on your location.

If you submit a valid claim under the warranty service policy, AYANEO will, at its discretion, repair, replace, or refund your AYANEO Pocket Micro. The warranty rights you enjoy are in addition to the rights provided by local consumer law. You may be required to provide details of your proof of purchase when you make a claim under this warranty policy.

Support
For more support and troubleshooting information, please visit www.ayaneo.com.

产品中有害物质的名称及含量

有害物质						
部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电路板组件	×	○	○	○	○	○
塑胶件	○	○	○	○	○	○
金属零件	×	○	○	○	○	○
电源线	○	○	○	○	○	○

本表格依据 SJ/T11364 的规定编制

○: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T26572 规定的限量要求以下。

X: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T26572 规定的限量要求。

注意: 本产品应用环保设计理念, 对有害物质进行了有效控制, "X" 表示的有害物质主要因技术发展水平限制, 无法实现有害物质的替代。

环保使用期限

标识指期限(十年), 电子电气产品中含有的有害物质在正常使用的条件下不会发生外泄或突变, 用户使用该电子电气产品不会对环境造成严重污染或对其人身、财产造成严重损害的期限。



Names and Contents of HazardousSubstances in the Product

Hazardous Substance						
Part Name	(Pb)	(Hg)	(Cd)	(Cr(VI))	(PBB)	(PBDE)
PCB Components	×	○	○	○	○	○
Plastic Parts	○	○	○	○	○	○
Metal Parts	×	○	○	○	○	○
Power Cables	○	○	○	○	○	○

This table is compiled according to SJ/T11364 regulations

○: Indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirement specified in GB/T26572.

X: Indicates that the content of the hazardous substance in at least one homogeneous material of the part exceeds the limit requirement specified in GB/T26572.

Note: This product applies an environmentally friendly design concept and effectively controls hazardous substances. The "X" indicates that the hazardous substance is primarily due to the limitations of technological development, making substitution of the hazardous substance impossible.

Environmental Protection Use Period

The symbol indicates the period (ten years) during which the hazardous substances contained in the electronic and electrical products will not leak or undergo abrupt changes under normal use conditions. During this period, the use of these electronic and electrical products will not cause severe pollution to the environment or cause serious harm to the user's health and property.



AYANEO Pocket Micro 说明书

适用于 AYANEO Pocket Micro 机型说明

AYANEO Pocket Micro User Manual

For model of AYANEO Pocket Micro

Size 152×69mm

说明

一、请妥善保管本三包凭证, 本三包凭证和购机发票一起作为保修凭证, 在保修期内享受免费保修。

二、“三包”有效凭证

在“三包”有效期内产品出现故障, 消费者需凭购机发票和此三包凭证享受免费维修服务, 所修理产品机身号码同三包凭证上的产品机身号码必须一致。如无购机发票, 则以产品机身号码的生产出厂日期作为消费者产品“三包”有效期的起始时间。如两者全无的消费者, 则不能享受免费维修服务, 我司将实行收费维修服务。

三、根据《部分商品修理更换退货责任规定》, 属下列情况之一者, 不实行“三包”, 但可实行收费维修:

- 超出本公司产品保修期范围内的;
- 无法同时出示购机发票和填写保修凭证, 或保修凭证上与维修产品的型号、机身号码不符或涂改;
- 非承担三包的修理者进行修理或者拆动、改装等引起的故障和损坏;
- 未按照产品使用说明的要求使用、维护、保管而造成的故障和损坏;

- 使用非本公司所制造的产品配件引起的产品故障和损坏;
- 由于跌落、移动、运输等非产品质量原因引起的故障和损坏;
- 油烟、灰尘、受潮、直射阳光等恶劣条件下使用产生的故障和损坏;
- 由于雷击、水灾、火灾、地震、风灾等自然灾害及异常电压、公害、化学物质的侵蚀而造成的故障和损坏;
- 使用盗版软件造成损坏的;
- 使用过程中感染病毒造成损坏的。

四、超过“三包”有效期或“三包”责任范围的, 按照 AYANEO 规定的收费标准实

施收费服务。

在线自助服务: www.ayaneo.com.cn
技术支持热线: 400-039-8088

维修记录项目

送修日期	故障描述 故障原因 处理结果	使用配件	交验日期	修理单位 名称	维修人员 签字

AYANEO 商品三包凭证

商品名称 _____	消费者姓名 _____
商品商标 _____	消费者地址 _____
商品序列号 _____	消费者邮政编码 _____
商品产地 _____	消费者联系电话 _____

销售单位名称 _____	修理单位名称 _____
销售单位地址 _____	修理单位地址 _____
销售单位邮政编码 _____	修理单位邮政编码 _____
销售发票号码 _____	修理单位联系电话 _____
销售日期 _____	

AYANEO严格按照《微型计算机商品修理更换退货责任规定》, 为购买 AYANEO 商品的消费者实行三包。若服务条款与三包规定有不符之处, 以三包规定及三包凭证内容为准。对于执行特别三包目录的地区, AYANEO 承诺遵守当地的相关规定。

产品标签

销售单位印章
