

AYANEO Pocket AIR 说明书

适用于 AYANEO Pocket AIR
机型说明

AYANEO Pocket AIR
User Manual

For model of AYANEO Pocket AIR

AYANEO Pocket AIR



产品说明书

User Manual

AYANEO Pocket AIR 说明书

适用于 AYANEO Pocket AIR
机型说明

 
 
AYANEO Pocket AIR
User Manual

For model of AYANEO Pocket AIR



AYANEO
pocketair
RETRO EDITION

AYANEO

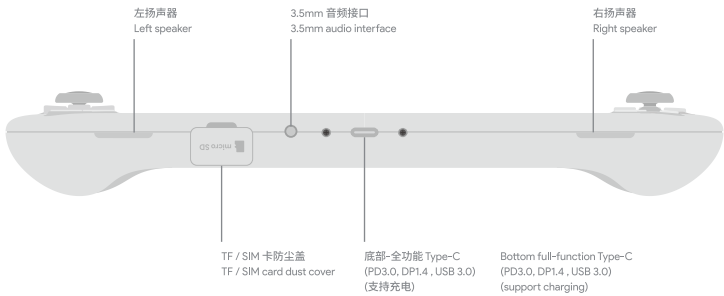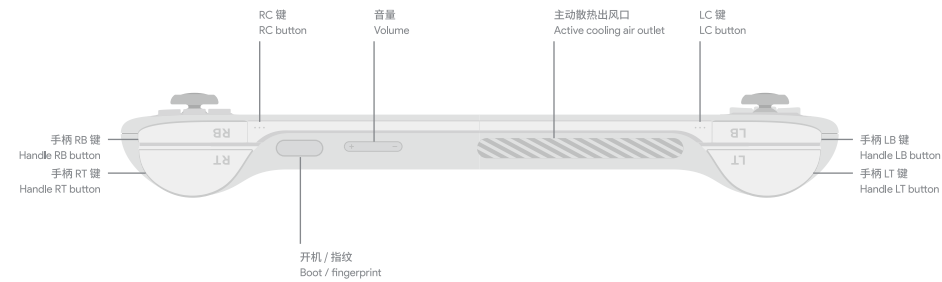

AYANEO

AYANEO Pocket AIR 说明书




适用于 AYANEO Pocket AIR 机型说明




AYANEO Pocket AIR User Manual

For model of AYANEO Pocket AIR


Power On / Power Off / Restart / Fingerprint


Under power off state, press and hold the power button  about 3 seconds, release the button, joystick ambient light on white light.

Under power on state, press and hold the power button  about 2 seconds, pop-up menu selection  Turn off AYANEO and select  AYANEO will restart.





Support fingerprint recognition, set up screen lock to use the fingerprint recognition feature. Settings  > Security  > Screen Lock. Option to set pattern, PIN code or password. Then select 'Fingerprint'  under the security option, enter your password or PIN to confirm security and then set up and enter your fingerprint.

Sleep Wake





Press the power button under power on status  AYANEO enters sleep state.

Press the power button under sleep state  wake up AYANEO. If the security screen lock has been set after waking up, draw pattern, enter password or PIN to confirm security before entering OS screen. If both security screen lock and fingerprint have been configured, touch the power button fingerprint recognition can quickly wake up to enter the OS interface, in the off state to turn on the device, you need to re-verify the security screen lock security before you can use the fingerprint to unlock the screen.

Volume

Tap volume  volume increases gradually, press and hold to increase volume continuously. Tap Volume  volume decreases. In Settings  > Sound , corresponding to adjusting media volume, notification volume, alarm volume, etc.

Network / Bluetooth

AYANEO supports WLAN and 4G networks. When you need to connect to the network via WLAN, Settings  enter Settings menu Home, Network and Internet  > WLAN  Enter and select the required network name, enter the password in "Security", click "Connect" to connect to WLAN network, and click the switch icon on the right  WLAN function can be turned on or off.

When you need to use mobile data to connect to the network, install a Nano-SIM card that supports 4G network before you can use mobile data for network access, please consult your local network operator for specific data traffic package rates.

Supported network bands

GSM2 3 5 8 + WCDMA1 2 5 8 + CDMA800 BCO + LTE 1 2 3 4 5 7 8 12 17 20 26 28 34 38 39 40 41

When you need to connect Bluetooth, go to the home page of the settings menu and select

 Connected Devices >  Pairing With New Device , click on the Bluetooth device you want to connect to in the search list.



Nano-SIM / Micro SD




Open the dust cover at the bottom of the device and take out the integrated card slot, which supports 4G Nano-SIM card and micro SD memory expansion.

Enter Text

When you need to enter text, tap the input box to automatically call out the touch keyboard and use the touch to enter text.




Drop-down Menu


Touch the top of the screen and swipe down to call out the drop-down menu, you can quickly switch between WLAN, Bluetooth, fan, handle/USB and other settings. Swipe down again to display the full drop-down shortcut menu, swipe the brightness adjustment slider to adjust the screen brightness. Click , to configure the shortcut button, click , to bring up the menu to power off and restart operation, click , to enter the main menu of settings.



Controller / USB

When you need USB data transfer, please turn off the controller function, touch the top of the screen and slide down to call out the drop-down menu, click  Hand lever (Hand lever turned on) switch the controller and USB function, when the USB function is on, the controller function is off, then the controller joystick and button are disabled, click  Hand lever (Hand lever turned on) switch back to controller.

FAN

The fan can be adjusted to the desired speed or turned off. Swipe down from the top of the touch screen to bring up the drop-down menu. Click on the "Fan" button  to switch between Off, Low, Medium, and High settings to turn off the fan or adjust its speed. It is recommended to turn on appropriate fan speed when running large applications.



Cleaning

Please use a lint-free cloth to clean AYANEO and do not expose any of the openings to moisture or use aerosol sprays, solvents or abrasives.

Battery and Charging

 
When AYANEO is charging, the joystick ambient light is always on red, and the white light is always on when the battery is full. When the battery is below 10% in the power on state, the joystick ambient light will be red and flashing regularly.

Please use the included adapter to charge AYANEO, do not use the adapter without safety certification to charge AYANEO, it may cause internal component damage and unpredictable danger.

Avoid prolonged skin contact with the plug when Type-C is plugged into the power supply, otherwise it may cause discomfort or injury. Do not try to replace the AYANEO battery by yourself, you may damage the battery, which may lead to overheating and fire and personal injury.

AYANEO lithium-ion batteries should be serviced or recycled by AYANEO and must be disposed of separately from household waste. Please dispose of the batteries in accordance with local environmental regulations. Batteries should only be replaced by AYANEO or AYANEO authorized service provider, and there is a risk of explosion if replaced with the wrong type of battery.

Type-C supports charging



Medical device interference

Some of the internal components of AYANEO contain magnets and radio-emitting electromagnetic fields that may interfere with medical devices, pacemakers, defibrillators or other medical equipment. Please Keep a safe distance between the medical device and AYANEO. Consult your physician and medical device manufacturer for medical device information. If you suspect that AYANEO is interfering with your pacemaker, defibrillator or other medical device, stop using AYANEO.

AYANEO warrants the enclosed hardware products and accessories against normal wear and tear for a period of one year from the date of original retail purchase, and against damage caused by accident or abuse. To obtain service, visit the AYANEO Store or an AYANEO authorized service provider. Available service options depend on the country or region where the service is requested and may be limited to the original country and region of sale. Call charges and international shipping charges may apply, depending on your location.

When you submit a valid claim under the Warranty Service Policy, AYANEO will repair, replace or refund your AYANEO, as appropriate. Your warranty benefits are in addition to the rights provided by local consumer law. When you make a claim under this warranty policy, you may be required to provide details of your proof of purchase.


Support

For more support and troubleshooting information, please visit www.ayaneo.com.

开机 / 关机 / 重启 / 指纹


关机状态下, 按下电源按钮  约 3 秒后松开将 AYANEO 开机, 摇杆氛围灯亮白色灯。

开机状态下, 按下电源按钮  约 2 秒弹出的菜单选择  将 AYANEO 关机, 选择  AYANEO 将重新启动。

支持指纹识别, 需设置屏幕锁定才能正常使用指纹识别功能。设置  > 安全  > 屏幕锁定, 可选择设置图案, PIN 码或密码。然后在安全选项下选择 "指纹" , 输入密码或 PIN 确定安全性后即可设置并录入指纹。

睡眠唤醒

开机状态下点按电源按钮  AYANEO 进入睡眠状态。

睡眠状态下点按电源按钮  将 AYANEO 唤醒。唤醒后已设置安全屏幕锁定的, 绘制图案、输入密码或 PIN 确定安全性后方可进入 OS 界面, 已同时配置安全屏幕锁定和指纹的, 轻触电源按钮指纹识别后可快速唤醒进入 OS 界面, 在关机状态开机进入的需要重新验证安全屏幕锁定安全性才可使用指纹解锁屏幕。

音量




点按音量  音量逐级增加, 长按则连续增加音量。点按音量  音量减小。在设置  > 声音 , 可对应调节媒体音量、通知音量、闹钟音量等。

文本输入

需要输入文本时, 点击输入框即自动弹出触摸键盘, 使用触控输入文本。



下拉菜单

屏幕顶部触控向下滑动呼出下拉菜单, 可快速切换 WLAN、蓝牙、风扇、手柄/USB 等设置, 再次向下滑动显示完整下拉快捷菜单, 滑动亮度调节滑块进行屏幕亮度调节, 点击  进行快捷按钮配置, 点击  弹出菜单可进行关机重启操作, 点击  进入设置主菜单。



电池和充电

 
AYANEO 进行充电时, 摇杆氛围灯红色常亮, 当电池充满时白灯常亮。开机状态下电量低于 10% 时, 摇杆氛围灯将亮红灯并有规律闪烁。

请使用附带的适配器对 AYANEO 进行充电, 切勿使用无安全认证适配器对 AYANEO 充电, 可能会造成内部元件损坏和不可预知的危险。





当 Type-C 插入电源时应当避免皮肤与插头长时间接触, 否则可能会引起不适或受伤。请勿尝试自行更换 AYANEO 电池, 您可能会损坏电池, 从而导致过热可能引发火灾和人身伤害。

AYANEO 的锂离子电池应由 AYANEO 提供相关服务或进行回收, 它必须和家庭垃圾分类回收处理。请按照当地的环保法规来处理电池, 电池只能由 AYANEO 或者 AYANEO 授权服务提供商进行更换, 用错误型号电池更换会有爆炸危险。

Type-C 支持充电



网络 / 蓝牙

AYANEO 支持 WLAN 及 4G 网络, 需要通过 WLAN 连接网络时, 设置  进入设置菜单主页, 网络和互联网  > WLAN  进入并选取需要连接网络名称, 在 "安全性" 选项输入连接密码后点击 "连接" 连接到 WLAN 网络, 点击右侧开关图标  可以开启或关闭 WLAN 功能。

需要使用移动数据连接网络时, 需要装上支持 4G 网络 Nano-SIM 卡才可以使用移动数据进行网络访问, 具体数据流量套餐资费标准请咨询当地网络运营商。

支持的网络频段

GSM2 3 5 8 + WCDMA1 2 5 8 + CDMA800 BCO + LTE 1 2 3 4 5 7 8 12 17 20 26 28 34 38 39 40 41



需连接蓝牙设备时, 设置菜单主页选择  已连接的设备 >  新设备配对, 在搜索列表点击需要连接的蓝牙设备。



Nano-SIM / Micro SD

翻开机身底部的防尘盖取出一体式卡槽, 支持 4G Nano-SIM 卡及 Micro SD 存储扩展。

手柄 / USB

需要 USB 数据传输时要关闭手柄功能, 屏幕顶部触控向下滑动呼出下拉菜单, 点击  切换手柄与 USB 功能, 开启 USB 功能时手柄功能关闭, 此时手柄摇杆与按键失效, 点击  切换回手柄。

风扇

风扇可按需求调节转速或者关闭, 屏幕顶部触控向下滑动呼出下拉菜单, 点击  切换关闭、弱、中、强来关闭及风扇调速。运行大型应用时建议开启适当调节合适风扇转速。



清洁

请使用不起绒的布来清洁 AYANEO , 切勿使任何一个开口处受潮或使用气雾喷射、溶剂或研磨剂。

医疗设备干扰

AYANEO 内部部分元件包含磁体及无线电发射电磁场, 这些电磁场可能会干扰医疗设备、心脏起搏器、除颤器或其他医疗设备。请在医疗设备和 AYANEO 之间保持一定的安全距离。请咨询您的医师和医疗设备制造商以获得医疗设备信息。如怀疑 AYANEO 干扰您的心脏起搏器、除颤器或者其他医疗设备, 请停止使用 AYANEO 。

AYANEO 保证所附硬件产品和配件, 从原零售购入的日期起一年内, AYANEO 对正常磨损不作担保, 对事故或滥用造成的损坏也不做担保。若要获取服务, 请访问 AYANEO 商城或者 AYANEO 授权服务提供商, 可用的服务选项取决于请求的服务所在的国家或地区, 并且可能限于销售的原始国家和地区。可能需要支付通话费用和国际运费, 这取决于您的位置。

当您根据保修服务政策提交有效的索赔时, AYANEO 将为您 AYANEO 酌情进行维修, 更换或退款。您享有的保修权益是附加在本地消费者法律所提供的权力以外的。当您根据本保修政策提出索赔时, 可能需要提供购买凭证的详细信息。国家和地区。可能需要支付通话费用和国际运费, 这取决于您的位置。

支持

更多支持和故障排除信息, 请访问 www.ayaneo.com.cn。

AYANEO Pocket AIR 说明书

适用于 AYANEO Pocket AIR 机型说明

AYANEO Pocket AIR User Manual

For model of AYANEO Pocket AIR

说明

- 一、请妥善保管本三包凭证,本三包凭证和购机发票一起作为保修凭证,在保修期内享受免费保修。
- 二、“三包”有效凭证
在“三包”有效期内产品出现故障,消费者需凭购机发票和此三包凭证享受免费维修服务,所修理产品机身号码同三包凭证上的产品机身号码必须一致。如无购机发票,则以产品机身号码的生产出厂日期作为消费者产品“三包”有效期的起始时间。如两者全无的消费者,则不能享受免费维修服务,我司将实行收费维修服务。
- 三、根据《部分商品修理更换退货责任规定》,属下列情况之一者,不实行“三包”,但可实行收费维修:
- 超出本公司产品保修期范围内的;
 - 无法同时出示购机发票和填写保修凭证,或保修凭证上与维修产品的型号、机身号码不符或涂改;
 - 非承担三包的修理者进行修理或者拆动、改装等引起的故障和损坏;
 - 未按照产品使用说明的要求使用、维护、保管而造成的故障和损坏;
 - 使用非本公司所制造的产品配件引起的产品故障和损坏;
 - 由于跌落、移动、运输等非产品质量原因引起的故障和损坏;
 - 油烟、灰尘、受潮、直射阳光等恶劣条件下使用产生的故障和损坏;
 - 由于雷击、水灾、火灾、地震、风灾等自然灾害及异常电压、公害、化学物质的侵蚀而造成的故障和损坏;
 - 使用盗版软件造成损坏的;
 - 使用过程中感染病毒造成损坏的。
- 四、超过“三包”有效期或“三包”责任范围的,按照 AYANEO 规定的收费标准实施收费服务。

在线自助服务: www.ayaneo.com.cn
技术支持热线: 400-039-8088

维修记录项目

送修日期	故障描述 故障原因 处理结果	使用配件	交验日期	修理单位 名称	维修人员 签字

AYANEO 商品三包凭证

商品名称 _____

商品商标 _____

商品序列号 _____

商品产地 _____

销售单位名称 _____

销售单位地址 _____

销售单位邮政编码 _____

销售发票号码 _____

销售日期 _____

消费者姓名 _____

消费者地址 _____

消费者邮政编码 _____

消费者联系电话 _____

修理单位名称 _____

修理单位地址 _____

修理单位邮政编码 _____

修理单位联系电话 _____

AYANEO 严格按照《微型计算机商品修理更换退货责任规定》,为购买 AYANEO 商品的消费者实行三包。若服务条款与三包规定有不符之处,以三包规定及三包凭证内容为准。对于执行特别三包目录的地区,AYANEO 承诺遵守当地的相关规定。

产品标签

销售单位印章